


PLUS 323 SPARE PARTS CATALOGUE



SUMMARY

Page 1	BodyWork
Page 2	Boiler
Page 3	Electrical
Page 4	Electrical 2
Page 5	Steam/ Hot Water Assembly
Page 6	Gauge/ Front Panel Assembly
Page 7	Touch Panel
Page 8	Steam Wand to Boiler
Page 9	Boiler / Pressure
Page 10	Water / Pipes
Page 11	Wiring Loam
Page 12	Body / Panels

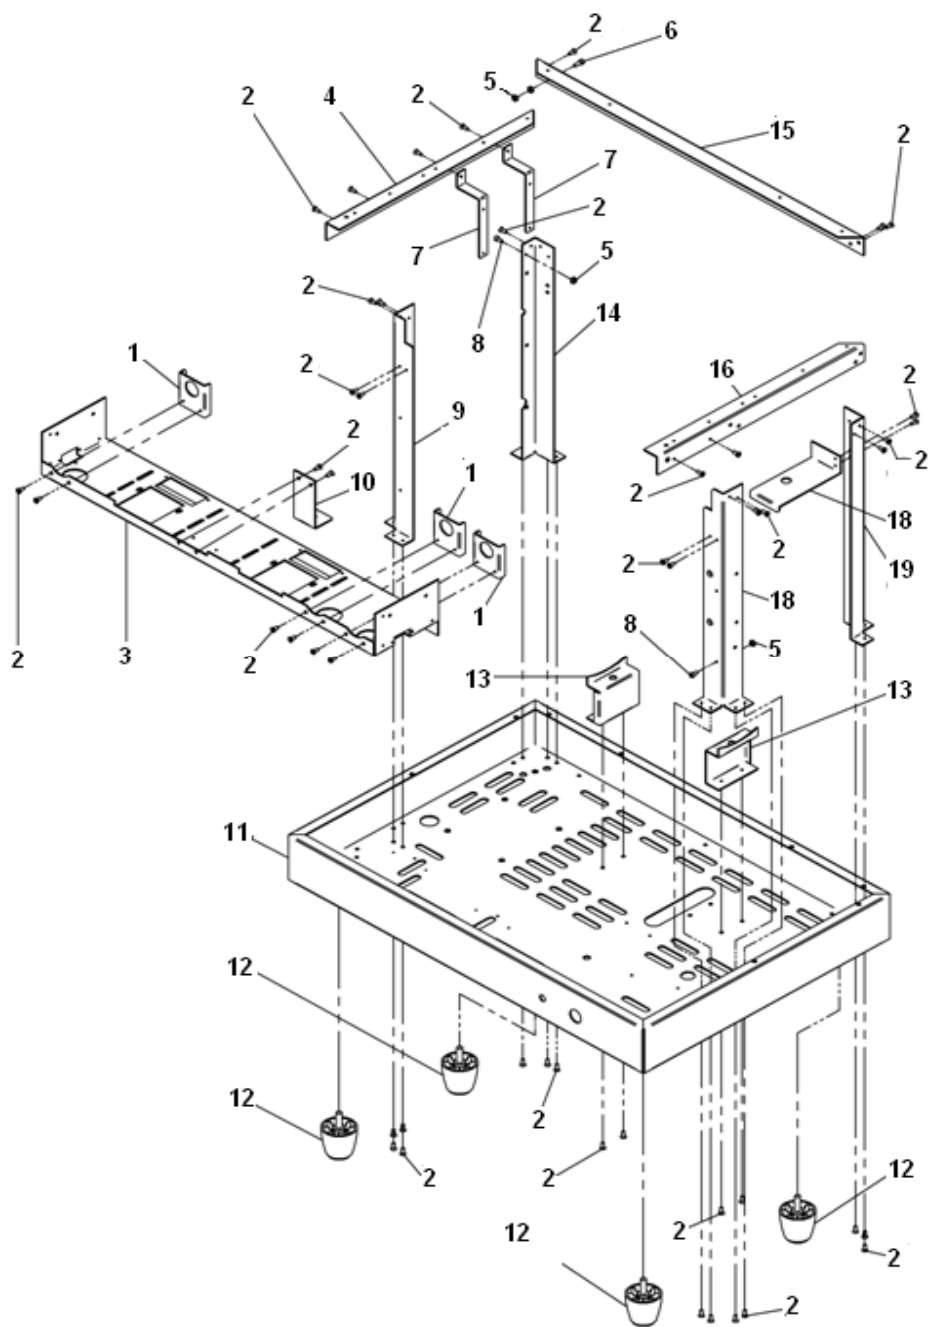


BodyWork


Pos.	Part No.	Item Name
1	GC-P14	Steam valve base
2	33002-X0	Screw M4x10
3	GC02-P01-A	Panel base
4	GC-P02L	Left top stand
5	33013-X0	Screw nut M4
6	33008-W0	Screw M4x12
7	GC-P22	IC box stand
8	33010-W0	Screw M4x8
9	GC-P04L	Front left stand
10	GC-P21	2-way solenoid valve base
11	GC02-P10	Bottom
12	21006-B0	Foot
13	GC-P18	Boiler stand
14	GC-P05L	Left Rear stand
15	GC02-P03	Top rear stand
16	GC-P02R	Right top stand
17	GC-P04R	Right front stand
18	GC-P12	Switch base
19	GC-P05R	Right rear stand

PLUS 323

Boiler

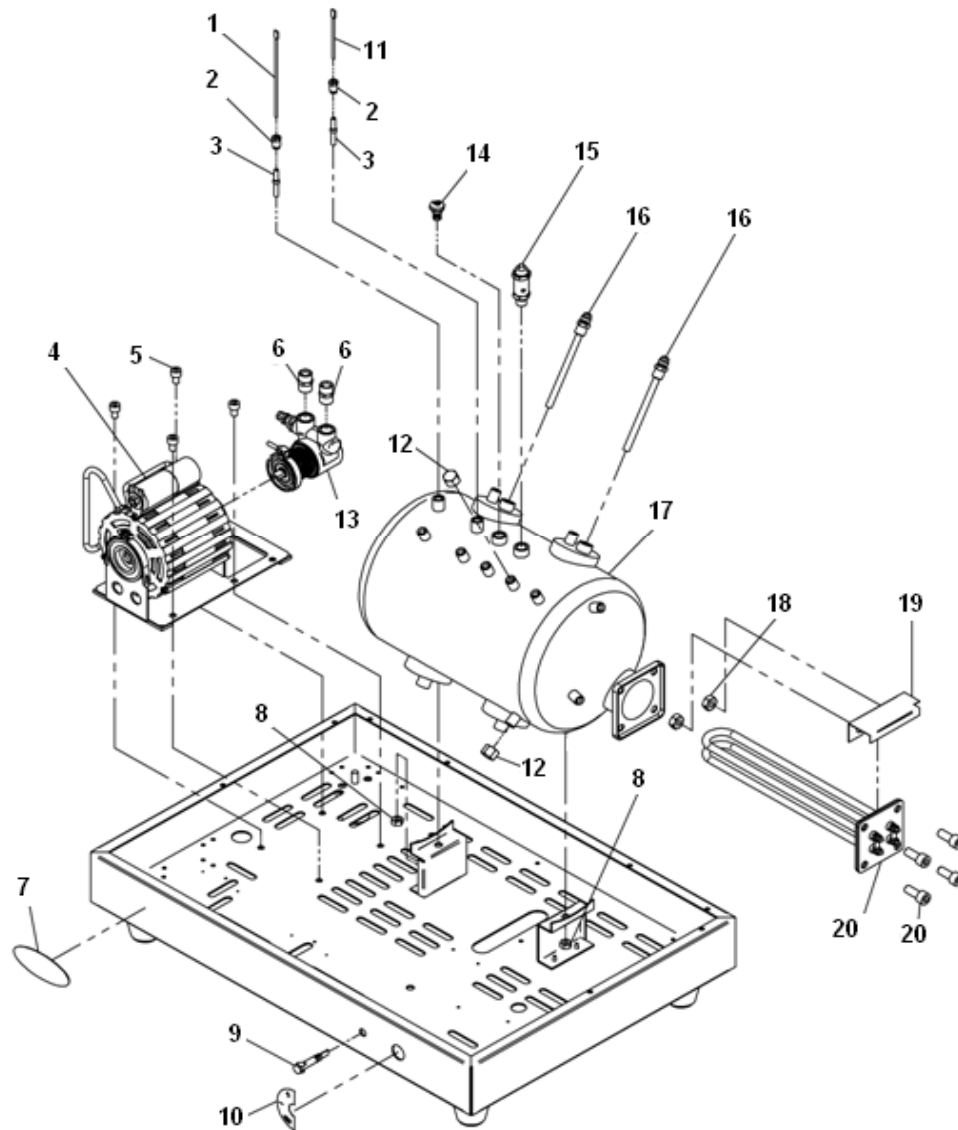

Pos.	Part No.	Item Name
1	41011-00	Water level prob
2	15001-S0	Probe screw nut
3	30001-00	Probe cover
4	25001-00	Motor
5	33017-W0	Screw M8x12
6	15040-S0	Connector
7	27008-00	Logo
8	33006-X0	Screw nut M8
9	17007-00	Power indicating lamp
10	27009-00	Switch board
11	41012-00	Top water level probe
12	15056-S0	Stopper
13	25002-00	Pump
14	A001	Anti-depression valve
15	A016	Safety valve
16	13024-T0A	Cold water pipe
17	39002-01B	2 group Boiler
18	33011-X0	Screw nut M10
19	GC-P19	Heater cover
20	38008-00	Heater

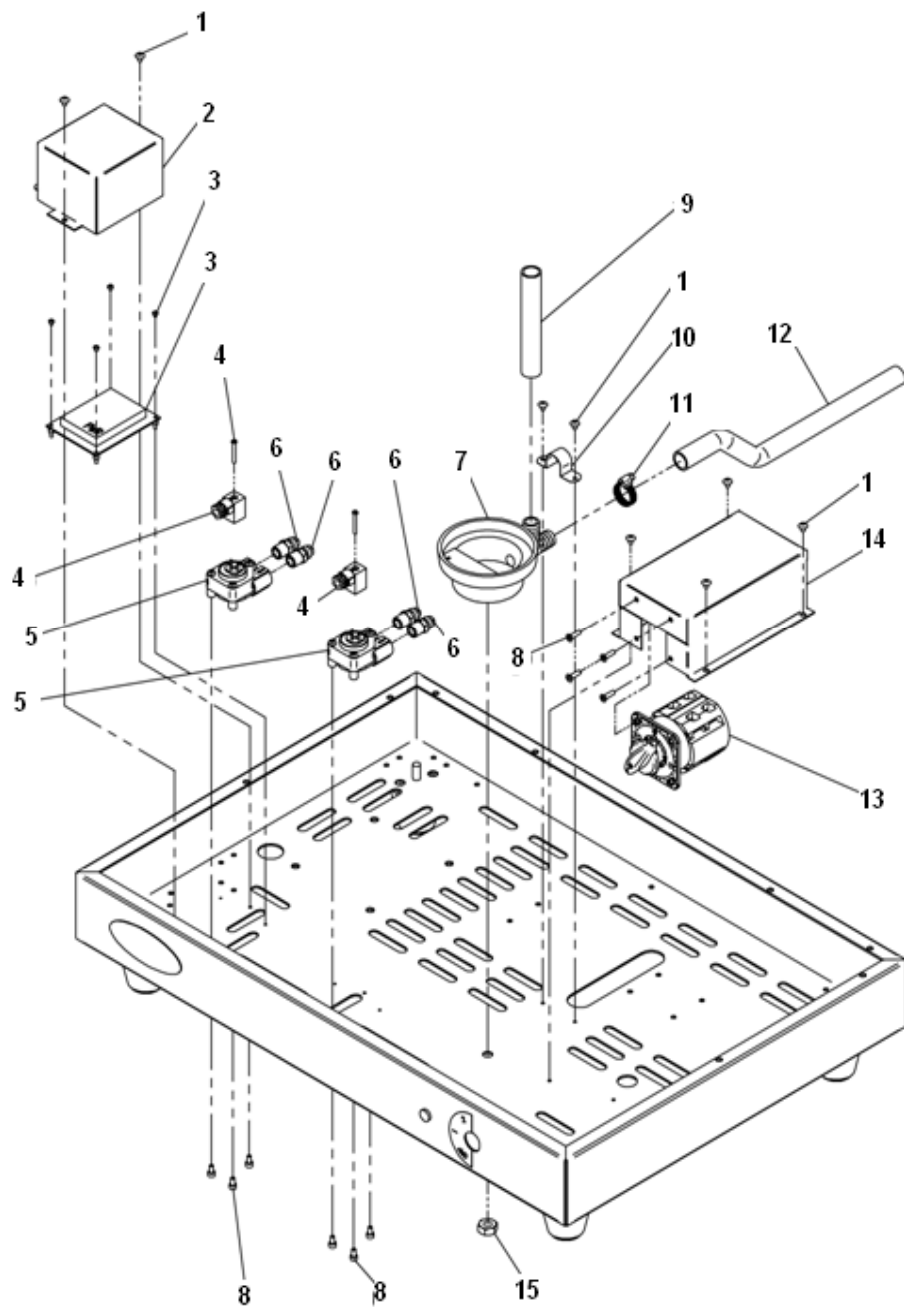


Electrical

Pos.	Part No.	Item Name
1	33014-X0	Screw M4x6
2	GC3-P25	Timer cover
3	20005-00	Timer power pad
4	19001-00	Flow meter connecting box
5	19002-00	Flow meter
6	16006-S0	Speaker connector 1/4 x 5/16
7	21008-B0	Drain tub
8	33010-W0	Screw M4x8
9	35010-00	Drain tub top pipe
10	35025-00	Clip (K44 Old No.)
11	35009-00	1" bundle
12	35013-00	Water pipe
13	17009-00	Switch
14	GC-P20	Switch cover
15	33011-X0	Screw nut M10

PLUS 323


Electrical 2

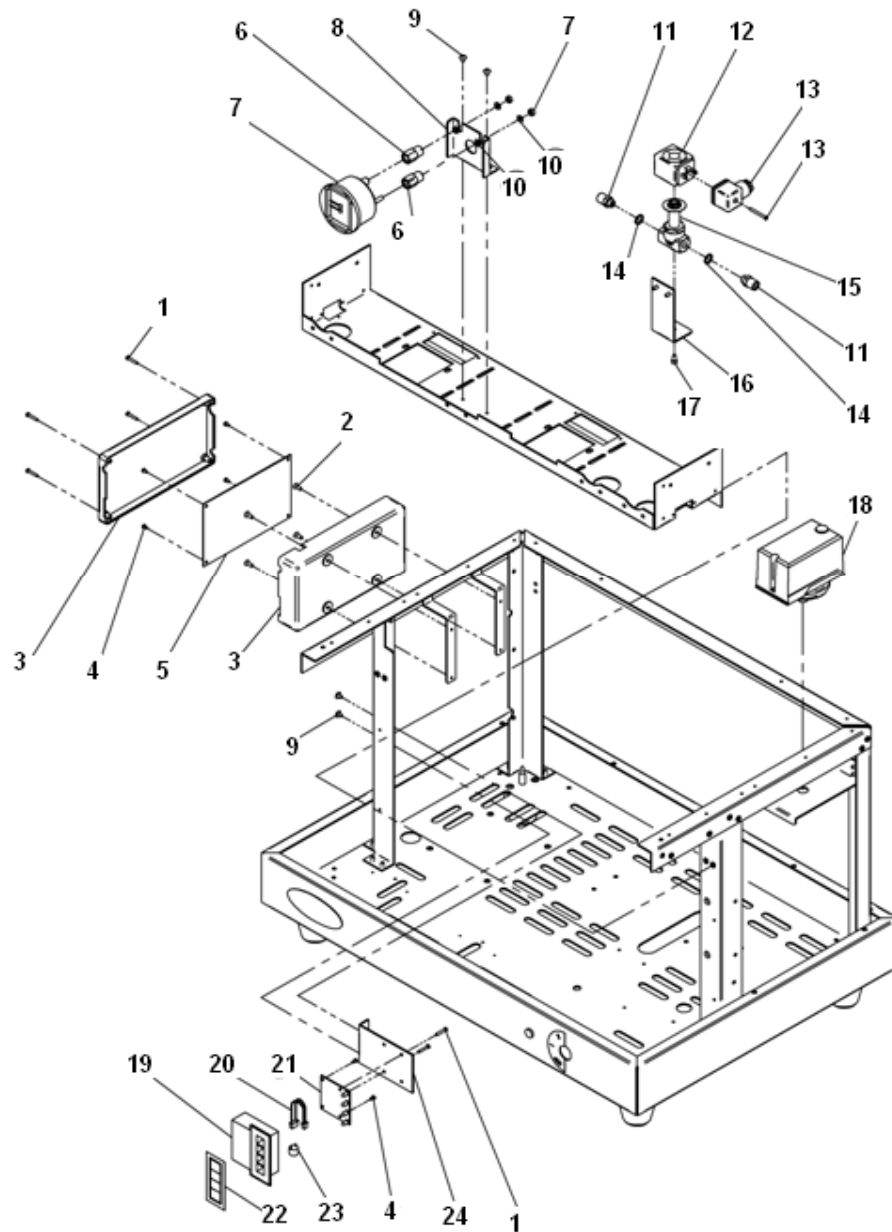

Pos.	Part No.	Item Name
1	33004-X0	Screw M3*18
2	33002-X0	Screw M4x10
3	21007-B0	IC box
4	33003-X0	Screw M3x6
5	20013-C	Main control IC board
6	15026-S0	Pressure gauge connector
7	17011-00	Double gauge
8	GC3-P13	Pressure gauge base
9	33014-X0	Screw M4x6
10	K36	Washer M5
11	15025-S0	2-way solenoid valve connector
12	18006-00	Solenoid valve coil
13	18001-00	Solenoid valve connecting box
14	24003-T0	Washer
15	18003-00	2-way solenoid valve
16	GC-P21	2-way solenoid valve base
17	33010-W0	Screw M4x8
18	17018-00	Pressure Switch
19	21002-B0	Electronic window case
20	12020-00	Alarm wire
21	20003-00	Electronic window IC board
22	27007-00	Water level pad
23	20007-00	Alarm
24	GC3-P26	Electronic window stand


PLUS 323

Steam/ Hot Water Assembly

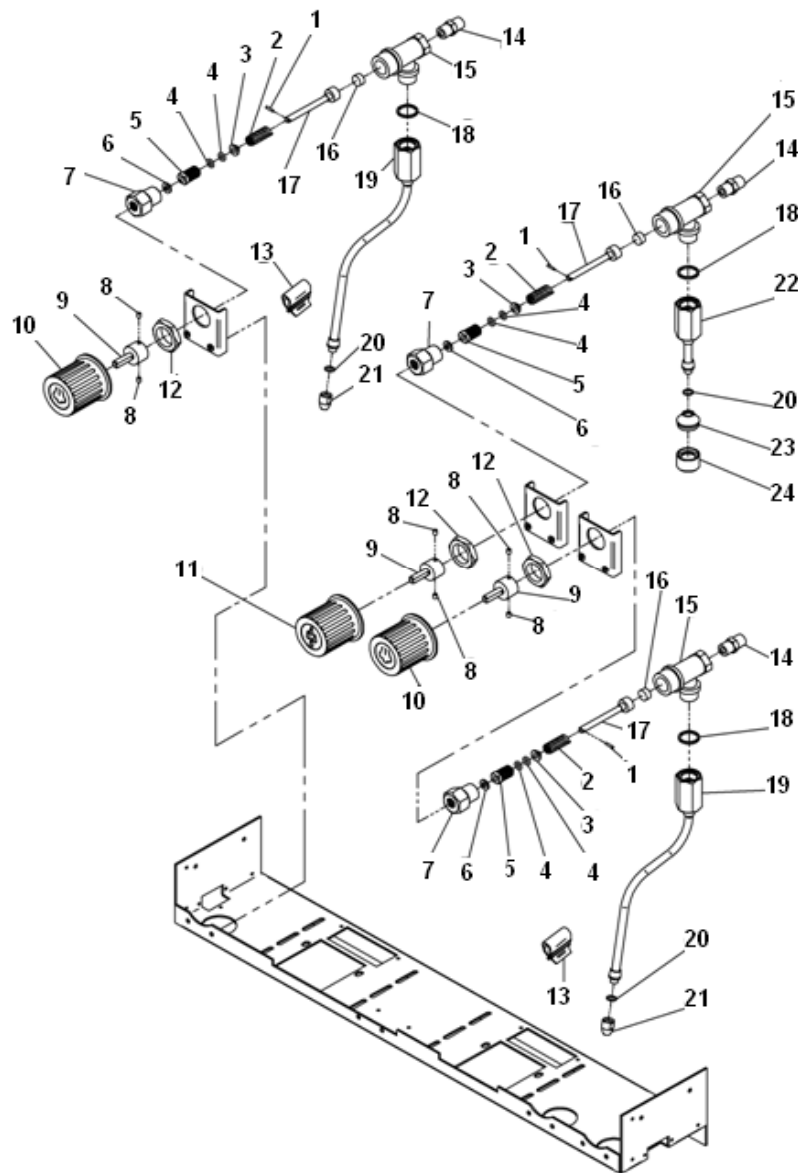

Pos.	Part No.	Item Name
1	33019-W0	Spring pin 2x10
2	29002-W0	Spring
3	15007-S0	Washer
4	23003-00	Oring
5	15011-S1	Inside shaft
6	33020-W0	Washer M6
7	15012-S1	Shaft stand
8	33015-W0	Screw M4x5
9	15024-S0	Knob shaft
10	A014	Steam knob
11	A015	Hot water knob
12	15023-S0	Steam valve body screw nut
13	21004-B0	Steam pipe clip
14	15061-S0	Valve connector
15	14001-S0	Steam valve body
16	23001-00	Washer
17	15013-S0	Shaft
18	30002-00	Washer
19	A006	Steam pipe
20	23011-00	Oring
21	15055-S0	Steam sprayer
22	A011	Hot water pipe
23	15021-Y0	Hot water knob connector
24	26001-00	Filter


Gauge/ Front Panel Assembly

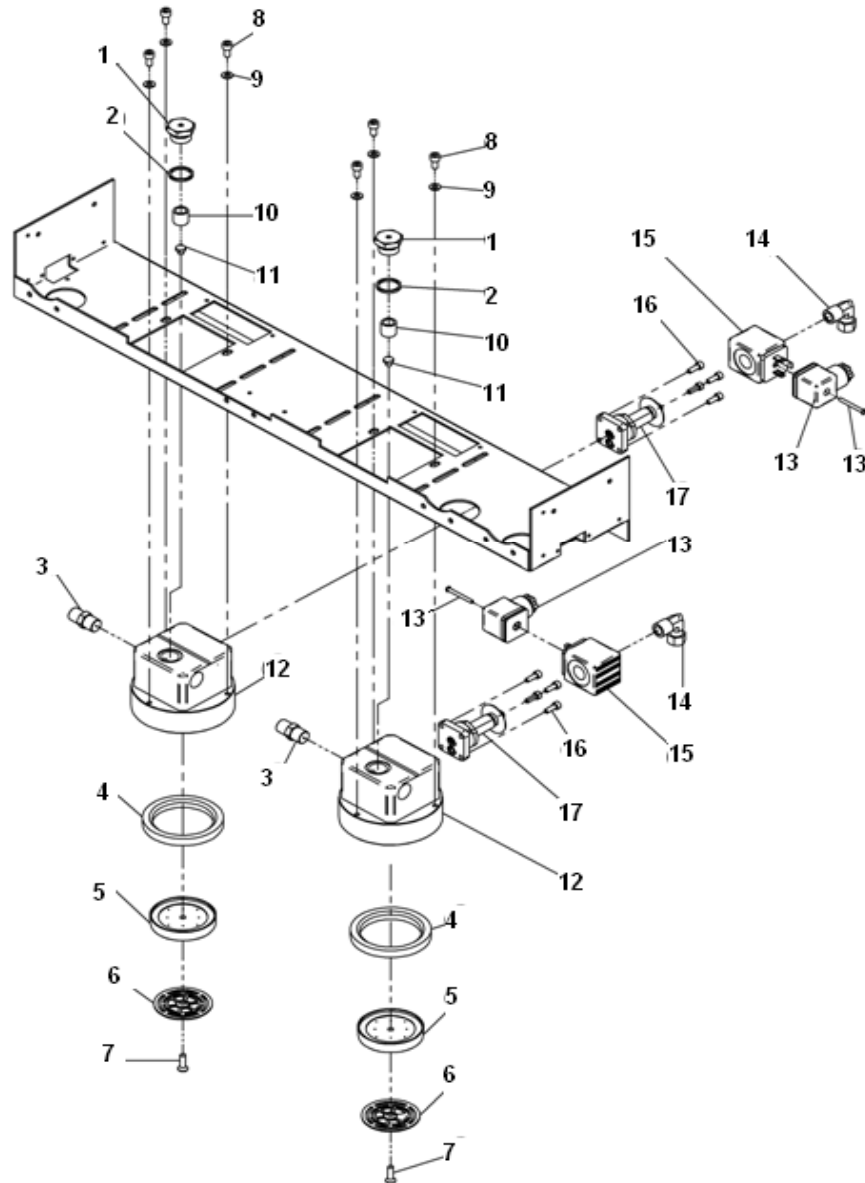

Pos.	Part No.	Item Name
1	15004-S0	Group head filter screw
2	30002-00	Washer
3	15015-S0	Hot water input connector
4	23005-00	Filter holder gasket
5	15016-S1	Shower screen holder
6	26005-W0	Shower screen
7	33012-W0	Screw M5x16
8	33001-W0	Screw M5x10
9	K36	Washer M5
10	26006-W0	Jet filter
11	15014-S2	Anti-stopper
12	14010-00	Group head
13	18001-00	Solenoid valve connecting box
14	16021-S0	Connector 90degree
15	18006-00	Solenoid valve coil
16	33008-W0	Screw M4x12
17	18002-00	3-way solenoid valve base


Touch Panel

Pos.	Part No.	Item Name
1	17010-00	Push pad
2	21014-B0	Push pad box
3	33014-X0	Screw M4x6
4	12010-00	Wire (left)
5	12013-00	Connecting pin
6	12009-00	Wire(Right)
7	33027-00	Screw M3x8 (K45) (x100 pcs)
8	33025-00	Screw M3x6 (K46) (x100 pcs)
9	20006-00	Timer display
10	33028-00	Screw M3x20 (K47) (x100 pcs)
11	18001-00	Solenoid valve connecting box
12	GC32-P06	Panel

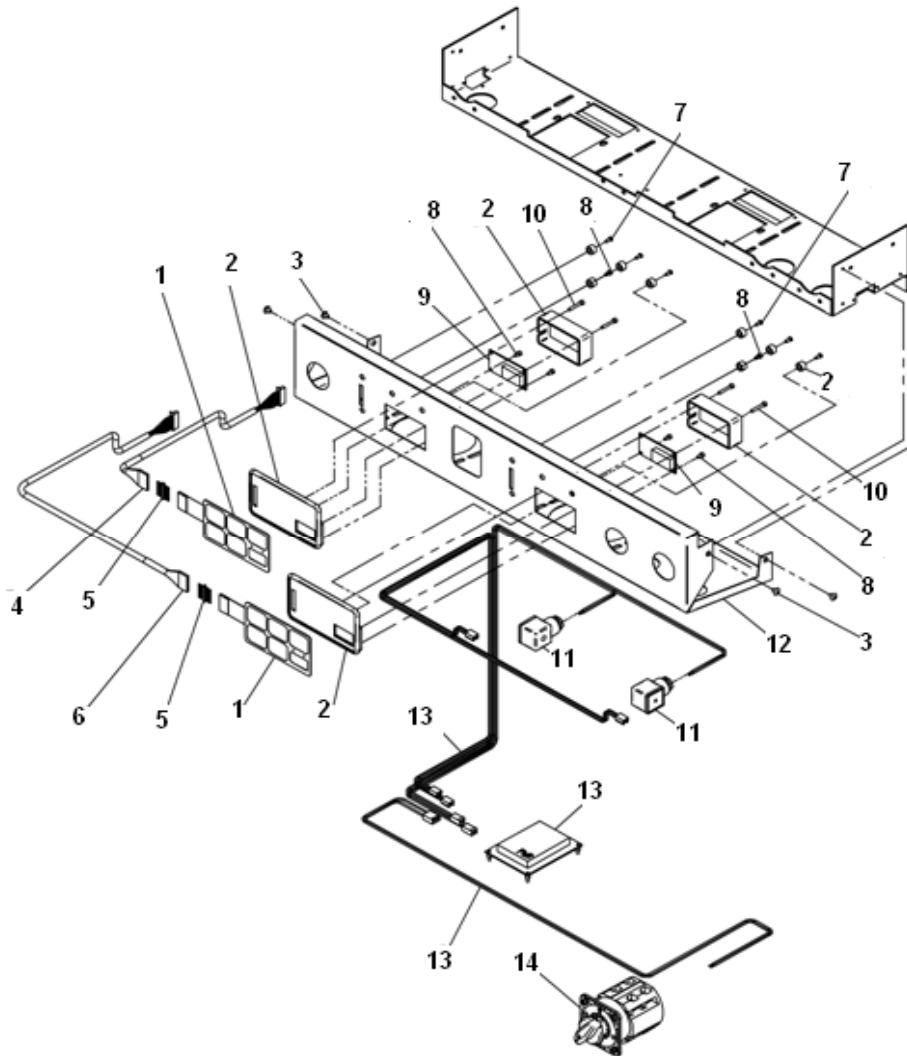


Steam Wand to Boiler

Pos.	Part No.	Item Name
1	13025-T2	Left clean pipe
2	13026-T2	Right clean pipe
3	T08	Left steam pipe
4	13018-T0A	Left cold water input
5	13003-T1A	Right steam pipe
6	13008-T0A	Pressure switch pipe
7	13005-T1A	Hot water pipe
8	T07	Right cold water input

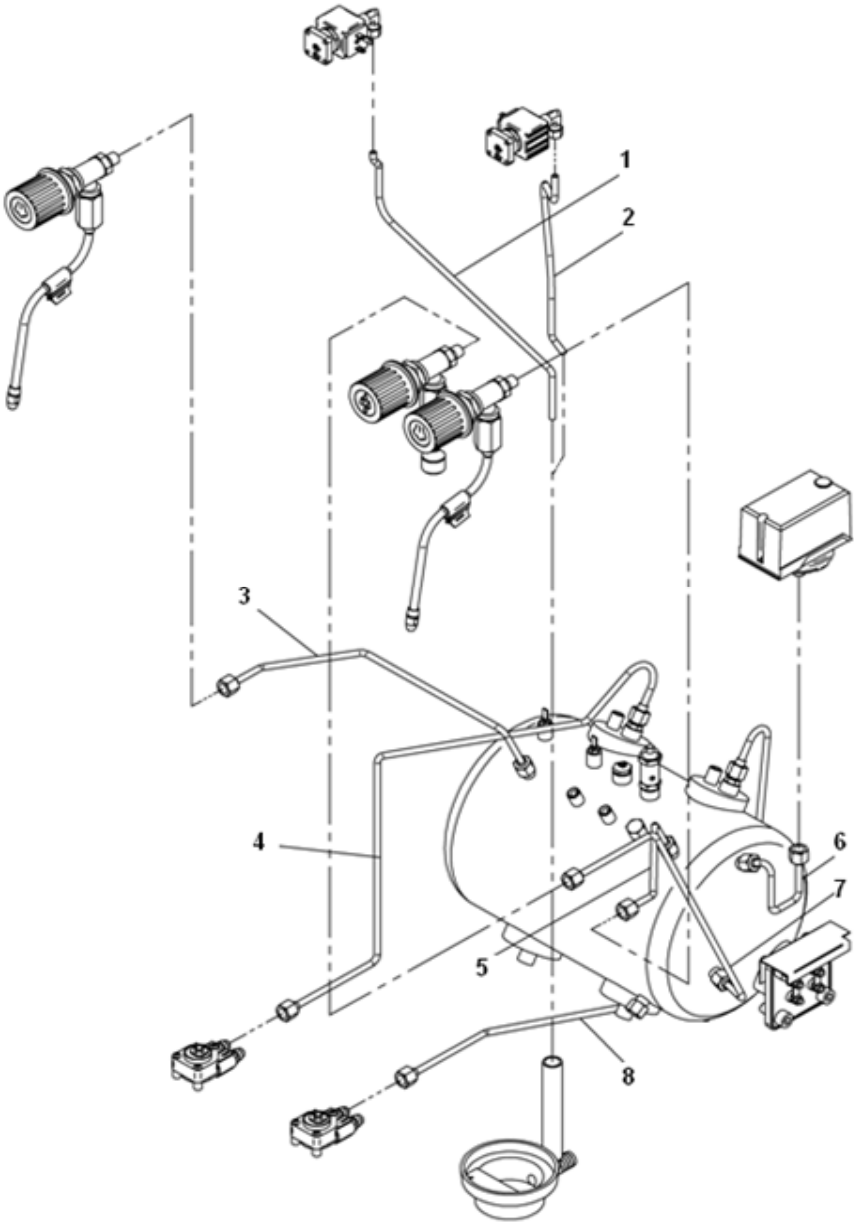


Boiler / Pressure

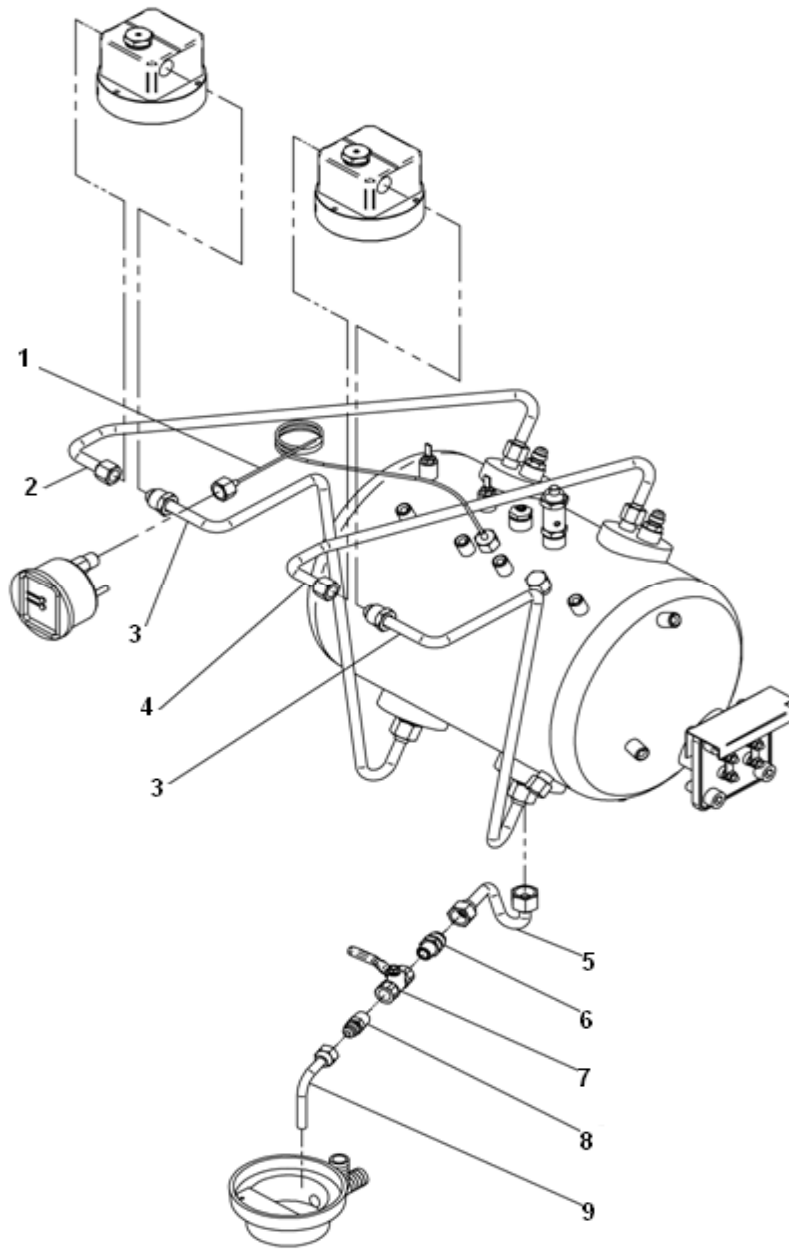

Pos.	Part No.	Item Name
1	13048-30	Pressure gauge
2	13076-00	Left hot water input pipe
3	T06	Left right water return pipe
4	13077-00	Right hot water input pipe
5	13022-T1A	Boiler drain water pipe (front)
6	16008-S0	Speaker connector 1/4 x 3/8
7	28003-Y0	Drain water valve
8	16006-S0	Speaker connector 1/4 x 5/16
9	13023-T0A	Boiler drain water pipe (rear)

PLUS 323


Water / Pipes

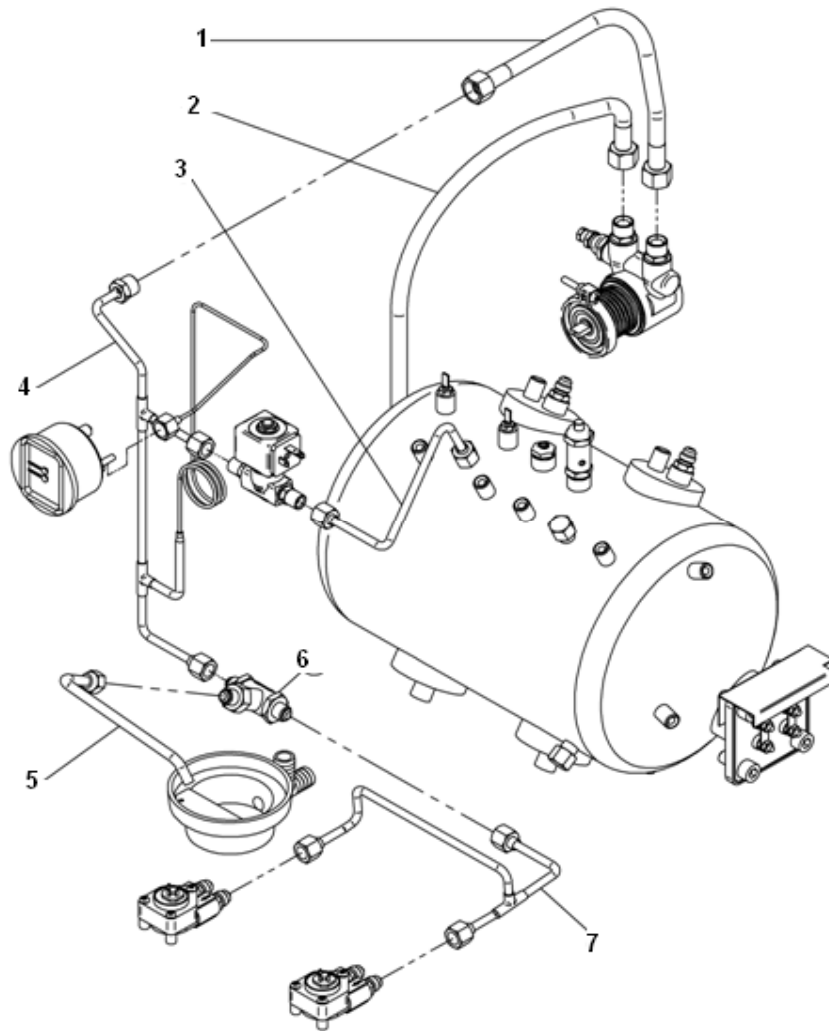

Pos.	Part No.	Item Name
1	22004-00	Flex hose
2	22005-00	Flex hose
3	T13	Cold water input
4	13021-T1A	Water output
5	13009-T0A	Water pipe
6	28001-S0	Adjustable valve
7	13020-T0A	Flow meter input

Wiring Loam

Pos.	Part No.	Item Name
1	12014-00	Electronic window wire
2	12008-00	Flow meter wire(Left)
3	12007-00	Flow meter wire(Right)
4	12001-00	Solenoid valve wire
5	12005-00	Water level probe wire
6	12002-00	Heating wire
7	12006-00	Public power cord
8	12003-00	IC board connecting wire
9	12011-00	Power cord
10	12004-00	Pressure switch wire

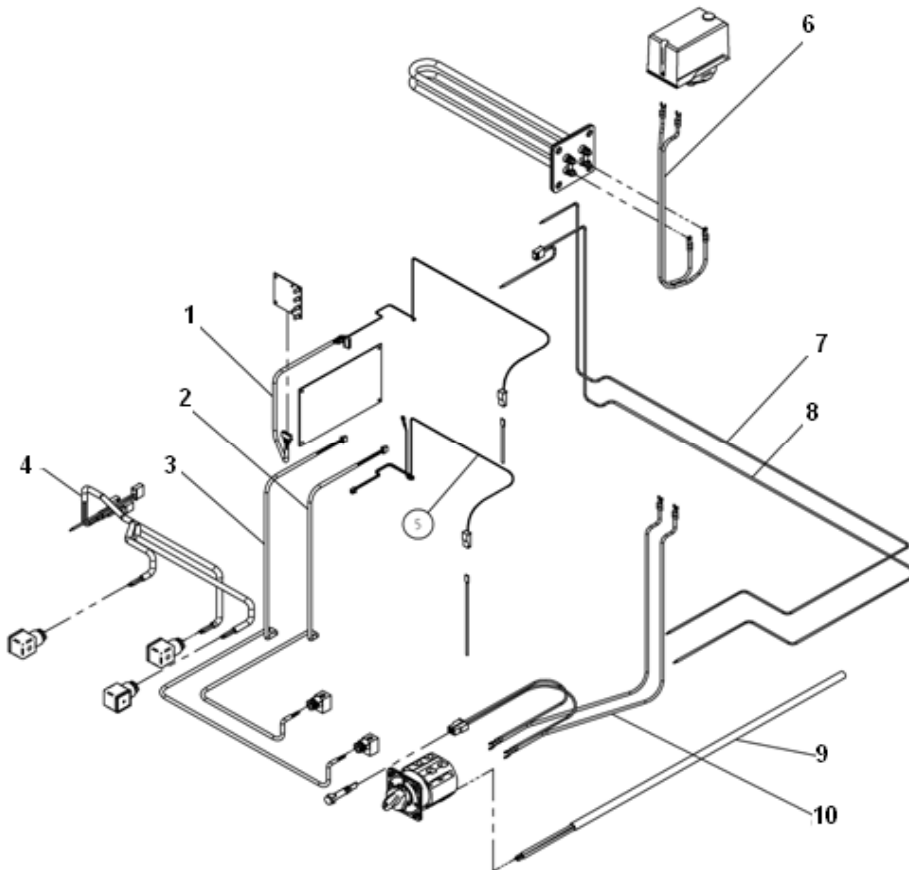

Body / Panels

Pos.	Part No.	Item Name
1	41002-W0	Left cup holder
2	GC3-P08S	Rear panel
3	41001-W0	Right cup holdre
4	33014-X0	Screw M4x6
5	GC3-P07LS	Front left panel
6	GC32-P16	Center panel
7	GC02-P11	Water try
8	34003-00	Acrylic border
9	GC32-P17A	Cup holder
10	27008-00	Logo
11	GC32-P09S-1	Back panel
12	GC3-P07RS	Right front panel

